


SOUTH AMENITY ENLARGEMENT PLAN



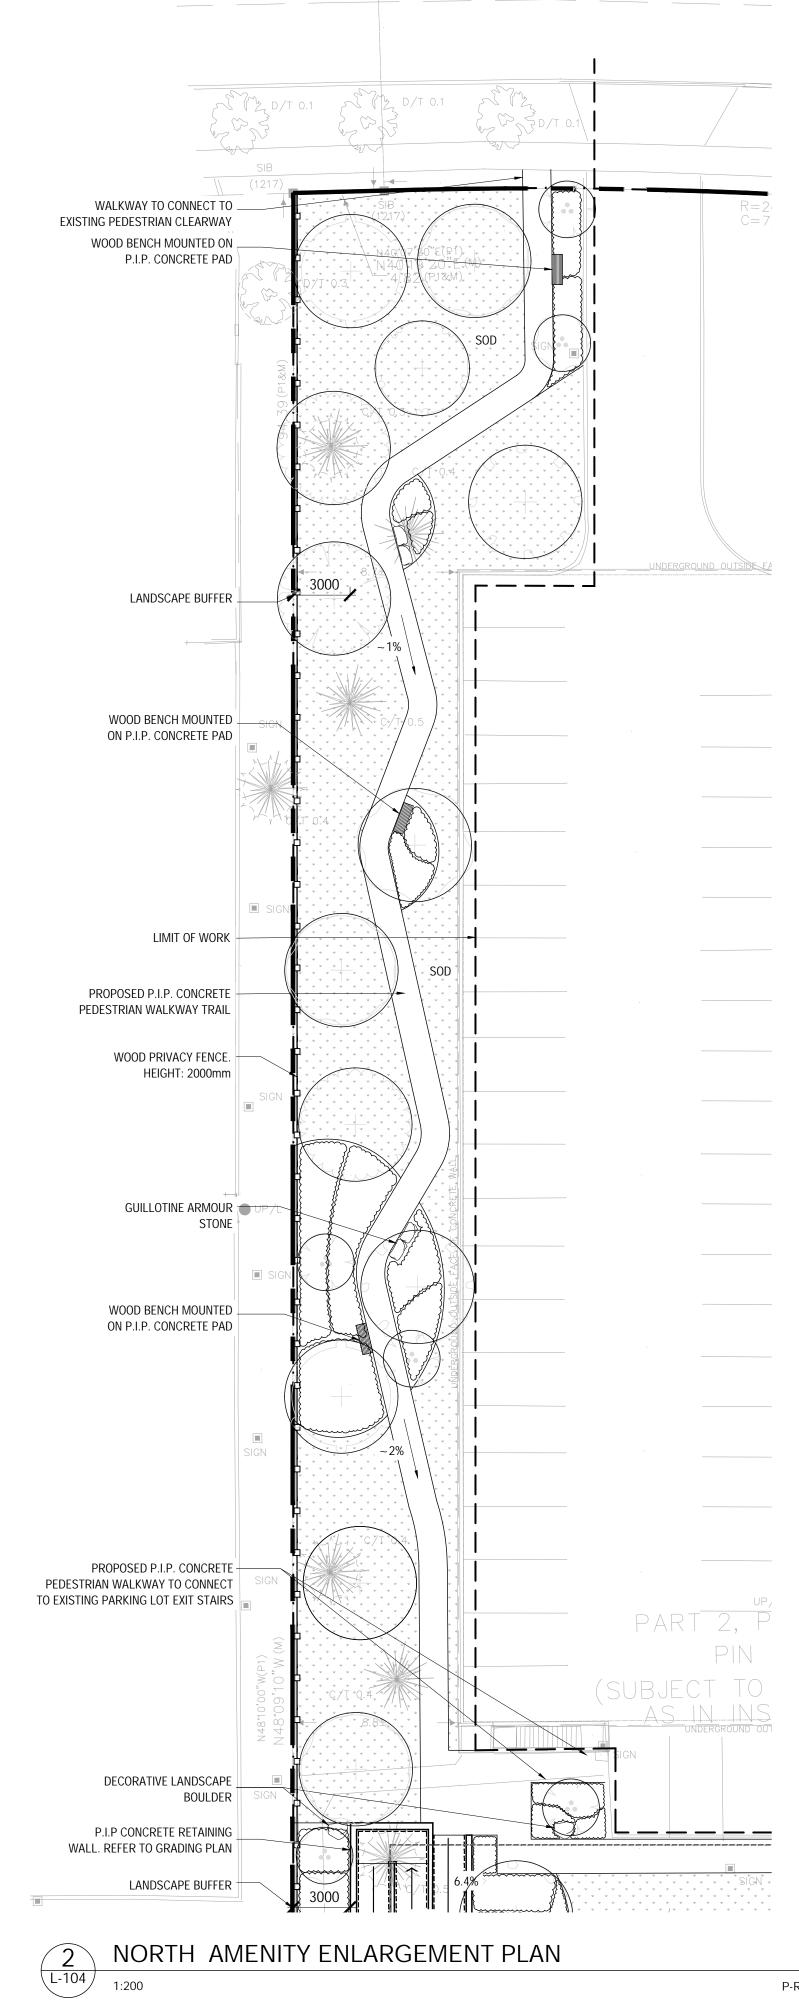

Architect -Civil Eng -Mech Eng -Interior -

GENERAL NOTES

- 1. All dimensions in millimetres (mm) 2. Verify all dimensions
- 3. Do not scale drawings
- 4. Check drawings against specifications
- 5. Use the latest revised drawings only
- 6. Report any discrepancies to the Landscape Architect before proceeding 7. Drawings and specifications are the property of the Landscape
- Architect, and must be returned upon completion of the work

NOT FOR TENDER NOT FOR CONSTRUCTION

P-RE-333-13



RH